

HYUNDAI

APPLIANCES

1500W AIR FRYER HYAF5001DB

 
Instruction Manual



Scan for website



GENUINE PRODUCT OF
HYUNDAI CORPORATION

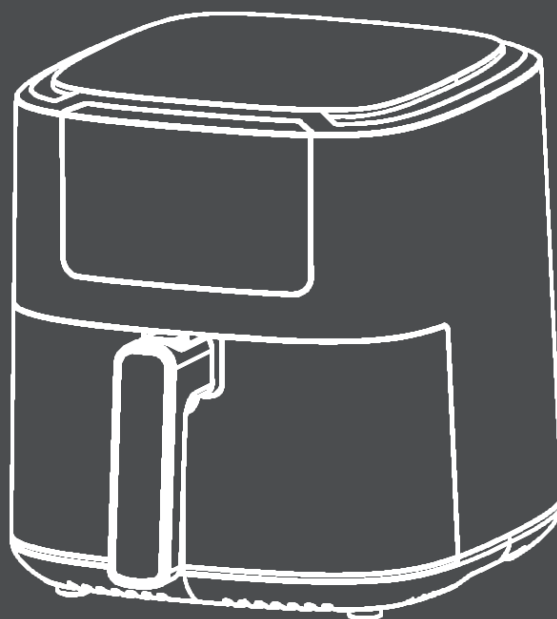

WARNING: Read the instructions carefully before use.

Iss:Jan/26

Contents Page

Introduction.....	3	Contact.....	22
Safety Information	4-11	Replacement Parts & Spares.....	23
Understand Your Machine.....	4	Recycling & Disposal.....	24
Personal Safety.....	4	Technical Data.....	25
General Warnings.....	5-6	Declaration of Conformity.....	26
During Use.....	7	Useful Infotion.....	27
Electrical Safety - Grounding.....	8	Our YouTube Channel.....	27
Electrical Safety.....	8-9	Warranty.....	27
Double Insulated Devices.....	9	Manual Updates.....	27
Residual Risks.....	9	Returning Your Product.....	27
Intended Use.....	10	Leaving A Review.....	27
Symbols on the Machine.....	11	Ordering Spare Parts.....	27
Unboxing.....	12	Product Record.....	28
Before First Use.....	13	Notes.....	29-31
In the Box/Features.....	14		
Control Panel.....	15-17		
Machine Setup.....	18		
Operation.....	19		
Maintenance & Care.....	20		
Cleaning.....	20		
Storage.....	20		
Troubleshooting.....	21		

Introduction

Thank you for buying your Hyundai Product

We work very hard to give all of our customers the best possible service. If you have any problems, before leaving negative feedback, please contact us to give us a chance to resolve the issue. We would be delighted if you left us positive feedback! Thank you for purchasing this product.

IMPORTANT!



WARNING: READ THE INSTRUCTION BOOKLET THOROUGHLY BEFORE USING THE MACHINE

Keep for future reference and pass it on if the machine is loaned or sold to another user.

This manual has been produced by Hyundai Products and should be kept with the product. Please read and understand these instructions before you use your product. Failure to do this may result in personal injury or damage to the product.

The safety precautions and warnings are to ensure your safety and protect you from harm or damage to the product.

The information contained in this manual was accurate at the time of production, however HYUNDAI Power Products may make modifications to the product without notification.

These are the original product instructions. This document is part of the product; retain it for the life of the product, passing it on to subsequent holders. Read this manual in full before attempting to assemble, operate or maintain this product.

This manual describes the purpose of the product and contains all the necessary information to ensure its correct and safe use. Following all the instructions and guidance in this manual will ensure the safety of both the product and the operator and increase the lifespan of the product.

All photographs and drawings within this manual are to help illustrate correct operation of the product. Every effort has been made to ensure the information contained in this manual is accurate. However, we reserve the right to amend this document without prior warning. Always use the latest version of the product manual.

Safety Information

Understand your Machine

- **WARNING!** You must read these instructions carefully before operating the machine. Make sure that you are familiar with the controls and properly operate the machine. You must learn how to stop the machine quickly. If you do not follow the warnings and instructions, it may result in fire and/or serious injury. Make sure to save all warnings and instructions for future reference.
- Read this manual and labels affixed to the machine to understand its limitations and potential hazards.
- Be thoroughly familiar with the controls and their proper operation. Know how to stop the machine and disengage the controls quickly.
- If the unit is to be used by someone other than original purchaser, or is to be loaned, rented, or sold, always provide this manual and any needed safety training before operation. The user can prevent and is responsible for accidents or injuries that may occur to themselves, to other people, or to property.
- Do not force the machine beyond its limits. Use the correct machine for your application.
- Know how to stop the machine quickly in case of emergency. Understand the use of all controls.
- ALL MAINTENANCE other than that listed in this manual, should be carried out by professionally trained and certified personnel.
- When using this machine for the first time and you **MUST** read through this Instruction Manual and understand the labels affixed to the Air Fryer.

Personal Safety

- **WARNING!** You must read these instructions carefully before operating the machine. Make sure that you are familiar with the controls and properly operate the machine. You must learn how to stop the machine quickly. If you do not follow the warnings and instructions, it may result in fire and/or serious injury. Make sure to save all warnings and instructions for future reference.
- Read this manual and labels affixed to the machine to understand its limitations and potential hazards.
- Be thoroughly familiar with the controls and their proper operation. Know how to stop the machine and disengage the controls quickly.
- If the unit is to be used by someone other than original purchaser, or is to be loaned, rented, or sold, always provide this manual and any needed safety training before operation. The user can prevent and is responsible for accidents or injuries that may occur to themselves, to other people, or to property.
- Do not force the machine beyond its limits. Use the correct machine for your application.
- Know how to stop the machine quickly in case of emergency. Understand the use of all controls.
- ALL MAINTENANCE other than that listed in this manual, should be carried out by professionally trained and certified personnel.
- When using this machine for the first time and you **MUST** read through this Instruction Manual and understand the labels affixed to the Air Fryer.

Safety Information

General Warnings

1. This Air Fryer can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Keep the appliance and its power cord out of reach of children. DO NOT allow the appliance to be used by unsupervised children. Close supervision is necessary when used near children. To eliminate a choking hazard for young children, remove and discard the protective cover fitted on the power plug of this appliance.
3. To eliminate a choking hazard for young children, remove and discard the protective cover fitted on the power plug of this appliance.
4. Children should not play with the appliance.
5. NEVER use an power supply socket below counter.
6. NEVER connect this appliance to an external timer switch or separate remote-control system.
7. DO NOT use an additional extension cord. The power cord with the machine is long enough to use without posing any danger for children to pull the cord and hurt themselves.
8. To protect against electrical shock NEVER expose any external part of the machine to running or splashing water. Cook only in the ceramic-coated pan provided.
9. Regularly inspect the appliance and power cord/supply. DO NOT use the appliance if there is damage to the power cord or plug. If the appliance malfunctions or has been damaged in any way, immediately stop use and call Customer Service.
10. ALWAYS ensure the appliance is properly assembled before use.
11. DO NOT cover the air intake vent or air socket vent while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat.
12. Before placing removable cooking insert into the main unit, ensure pan and unit are clean and dry by wiping with a soft cloth.
13. This appliance is for household use only. DO NOT use this appliance for anything other than its intended use. DO NOT use in moving vehicles or boats. DO NOT use outdoors. Misuse may cause injury or damage to the machine.
14. Intended for worktop use only. Ensure the surface is level, clean and dry. DO NOT move the appliance when in use.
15. DO NOT place the appliance near the edge of a worktop/or within reach of children during operation.
16. DO NOT use accessory attachments not recommended or sold by Hyundai Power Products.
17. When using this appliance, provide adequate space above and on all sides for air circulation.
18. ALWAYS ensure drawer is properly closed before operating.
19. DO NOT use the appliance without the removable cooking insert installed.
20. DO NOT use this appliance for deep-frying.
21. Only ever use inserts and accessories which are specifically designed to be used with Air Fryers.

Safety Information

General Warnings Continued

21. DO NOT place the appliance on hot surfaces, near a hob burner or in an oven.
22. Prevent food contact with heating elements. DO NOT overfill when cooking. Overfilling may cause personal injury or property damage or affect the safe use of the appliance.
23. Socket voltages can vary, affecting the performance of your product. To prevent possible illness, use a thermometer to check that your food is cooked to the temperatures recommended.
24. Should the unit emit black smoke, unplug immediately. Wait for smoking to stop before removing any cooking accessories.
25. DO NOT touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury, ALWAYS use suitable utensils, protective heat pads and insulated cooking gloves and use available handles.
26. Extreme caution must be used when the appliance contains hot food. Improper use may result in personal injury.
27. Spilled food can cause serious burns. Keep appliance and cord away from children. DO NOT let cord hang over edges of tables or counters or touch hot surfaces.
28. The pan and crisper plate become extremely hot during the cooking process. Avoid physical contact while removing the pan or plate from the appliance. ALWAYS place pan or plate on a heat-resistant surface after removing. DO NOT touch accessories during or immediately after cooking.
29. Cleaning and user maintenance shall not be made by children.
30. To disconnect, turn off any control to OFF, then unplug from socket when not in use and before cleaning. Allow to cool before cleaning, disassembly, putting in or taking off parts and storage.
31. DO NOT clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating the risk of electric shock.
32. Please refer to the Cleaning & Maintenance section for regular maintenance of the appliance.
33. Never fill the machine with liquid intended for cleaning, and turn the machine on. This will cause damage to the machine and may cause damage to persons or the area around the machine.

Safety Information

During Use

- The appliance should be placed in a well ventilated area.
- The appliance should not be used by children or individuals with reduced capabilities unless they are supervised.
- **WARNING!** - If the drawer or drawers seals are damaged, the machine must not be operated until it has been repaired by a qualified technician.
- This appliance is not intended to be operated by an external timer or a separate remote-control system.
- The machine is for household use only and is not designed for commercial applications.
- **CAUTION!** - Only specialists should attempt repairs or maintenance. This also applies to replacing the power cord. In such cases, send the appliance to the our dedicated Aftersales team.
- The Air Frying is intended for Air Frying only, not steaming, smoking or any other cooking function.
- Use oven mitts/ heat proof kitchen hardware when handling heated food.
- Be cautious of escaping steam and heat when the drawer or removing food.
- If smoke is emitted, switch off or unplug the Air Fryer immediately, and keep the door closed to stifle any flames.

Safety Information

Electrical Safety - Grounding

IMPORTANT: This appliance must be grounded. It is equipped with a cord that includes a grounding wire and a grounding plug. The plug must be inserted into a properly installed and grounded wall outlet.

Grounding helps reduce the risk of electric shock by providing a safe path for electrical current in the event of a short circuit.

It is recommended to use a dedicated circuit that serves only the microwave oven. Using higher voltage can be dangerous and may cause a fire or other damage to the oven.

WARNING: Improper use of the grounding plug may result in electric shock.

 
NOTE:

1. If you have any questions regarding grounding or electrical instructions, consult a qualified electrician or service technician.
 2. The manufacturer and dealer are not liable for any damage to the oven or personal injury caused by failure to follow the electrical connection instructions.
- The wiring in the mains cable follows this colour code:

- Green and Yellow = Earth
- Blue = Neutral
- Brown = Live

Electrical Safety

DANGER : ELECTRICITY CAN KILL - NEVER WORK ON LIVE/ ENERGISED EQUIPMENT.

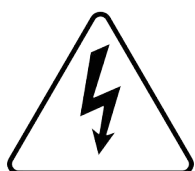

- Prior to carrying out any maintenance work you **MUST** identify electrical isolation methods and isolate all electrical supplies.
- Prior to use and with all electrical supplies isolated, you **MUST** check all electrical cables, plugs and connectors for the following;
 - Are intact and have no signs of damage, to include but not limited to bare wires, chaffing, cuts and loose wiring.
 - If there are any signs of damage, the damaged item **MUST** be taken out of service until the damage has been repaired by an electrically competent person.
 - All trailing cables should be routed so as not to cause any kind of trip hazard.
 - **NEVER** work on or near electricity with wet hands, wet clothing and wet gloves.

Safety Information

Electrical Safety (Continued)

- The appliance plug must match the outlet. Never modify the plug in any way. DO NOT use any adapter plugs with earthed (grounded) appliances. Unmodified plugs and matching outlets will reduce risk of electric shock.
- DO NOT expose this appliance to rain or wet conditions. Water entering an appliance will increase the risk of electric shock. DO NOT abuse the power cord. Never use the cord for carrying, pulling or unplugging the appliance. Keep the cord away from heat, oil and sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- **IMPORTANT:** Make sure that the electric circuit is fused, and that the power, voltage and frequency of the motor is supported by your mains supply. Also, make sure that your power supply is earthed. Connect your machine to earth. Never open the ON/OFF switch box. However, if it should become necessary to do so, contact a qualified electrician. Make sure that you will never touch live contacts, specifically when you plug or unplug your machine. This appliance and its power cord must never get into contact with water.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not allow any part of the machine to make contact with water while it is in operation. If the appliance becomes wet while turned off, wipe dry before starting.

Double-Insulated Devices

In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means that it is already provided on a double-insulated appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should be performed only by qualified service personnel. Replacement parts for a double-insulated appliance must be identical to the parts they replace.

Residual Risks

WARNING! This machine produces an electromagnetic field during operation. This field may under some circumstances interfere with active or passive medical implants. To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their physician and the medical implant manufacturer before operating this machine.

Safety Information

Intended Use

The HYAF5001DB is a 1500W Air Fryer with 5L of capacity from HYUNDAI.

The machine is manufactured according to the latest safety requirements. Every precaution is only effective when it is followed exactly.

Intended Use

This appliance is designed to heat, cook or “Air Fry” food. ALWAYS cook food according to the manufacturer's recommended instructions. In the absense of these recommendations, we have supplied some general guidelines in further in the manual.

This machine is not suitable for environments with an ambient temperature in excess of 32°C

Cooking Accessories

If you wish to use additional Air Frying specific accessories such as tray and inserts, they MUST be specifically designed for Air-Frying. any use of unsuitable accessories will be improper use and damage the machine and/or user.

User Types

This machine is intended for use by consumers, i.e. non professional operators. The machine is intended for “DIY” and domestic use only.

 
 
Improper Use

Any other usage not in keeping with the above mentioned ones may be hazardous and harm persons and/or damage things.

Safety Information

Symbols on the Machine

We have provided safety messages in this manual and on the machine. This information alerts you to potential hazards that could hurt you or others. Please read these messages carefully. However, we may not have listed all of the possible hazards, you must also use your own judgement.

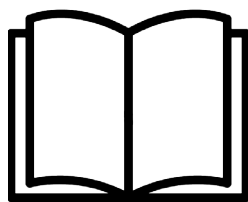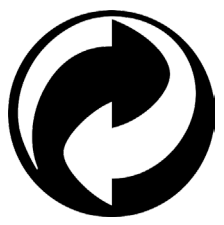Symbol	Description	Symbol	Description
	Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check your local authority or retailer for recycling advice.		This product complies with the European directives and an evaluation method of conformity for these directives was done
	The UKCA (UK Conformity Assessed) marking is a UK product marking that is required for goods being placed on the market in Great Britain (England, Wales and Scotland).		To reduce the risk of injury, the user must read and understand owner's manual before using this product.
	Do not expose to rain or use in damp conditions.		The appliance, associated components and packaging should be sorted, taken to the local recycling centre and disposed of in an environmentally safe way.

Unboxing

⚠ WARNING : Unboxing and assembling the machine should be done on a flat, surface with enough room. Disposal of the packaging should be done in accordance with the local regulations in force.

⚠ WARNING : Some of the packaging material may be harmful to children. Keep out of reach of children.

1. Carefully remove the product from the packaging and examine it for any sign of damage caused during shipping.
2. Lay the contents out and check them. If any part is damaged or missing, you must not use the machine. Contact HYUNDAI POWER PRODUCTS immediately.
3. You must keep the packaging material in case the machine needs to be returned or repaired.
4. Ensure that you have all the accessories and tools you need for assembly and operation including the suitable personal protective equipment.

 
We recommend that you fill out the information in the 'Product Record' section. If you need to contact an authorised dealer or customer service, you may need to provide this information.

Before First Use

⚠ IMPORTANT: Before using your new Air Fryer for the first time, it is important you read through the entirety of this instruction manual and adhere to the following steps:

1. Ensure all packing materials are removed from inside the machine.
2. **WARNING!** Inspect the inside for any damage, such as a misaligned or bent door, damaged door seals or sealing surfaces, broken or loose hinges and latches, or dents inside the cavity or on the drawer. If any damage is found, do not use the oven and contact qualified service personnel.
3. Place the Air Fryer on a flat, stable surface that can support both its weight and the heaviest food it may hold.
4. Avoid placing the Air Fryer near sources of heat, moisture, high humidity, or combustible materials.
5. To ensure proper operation, allow adequate airflow around the Air Fryer. Maintain at least 20 cm of space above, 10 cm at the back, and 5 cm on both sides. Do not block or cover any of the appliance's openings. Do not remove the feet.
6. Ensure the power cord is intact and does not run under the oven or over hot or sharp surfaces.
7. The power socket should remain easily accessible for quick unplugging in case of an emergency.
8. Do not use the Air Fryer outdoors.


In the Box / Features

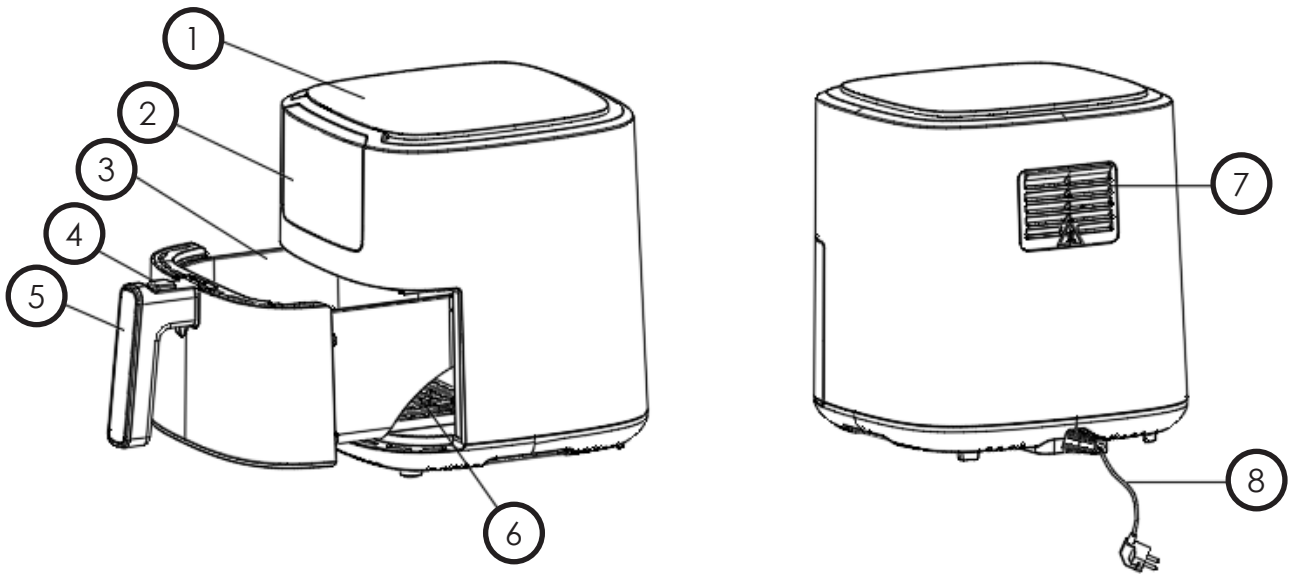

1. Air Inlet (top of machine)
2. Control panel
3. Air Fryer Drawer
4. Drawer Release Button
5. Main Handle
6. Crisping Insert
7. Air outlet
8. Power cord

Control Panel

 ⚠ IMPORTANT : Please ensure you become familiar with each icon on the control panel before using the microwave for the first time.

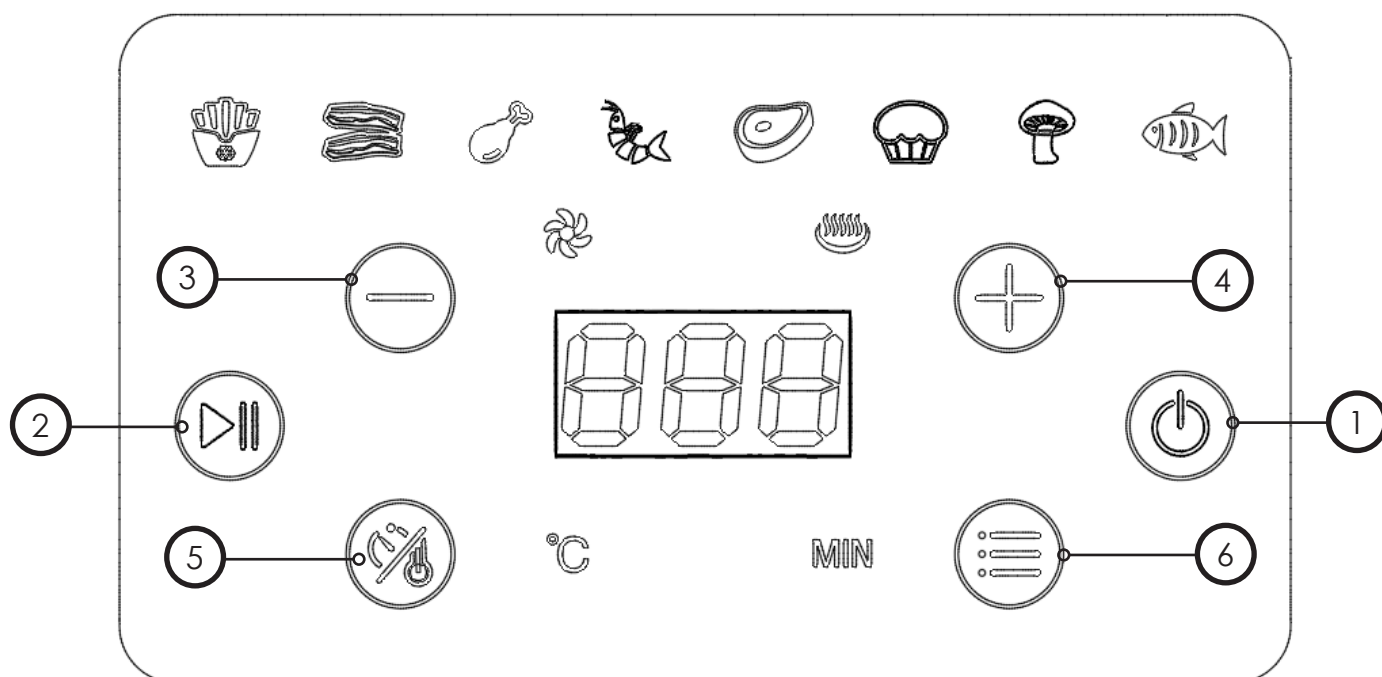

1 - Power Button - this is used to turn the machine on and off

2 - Start & Pause Button - this is used during cooking to stop and start the cooking.

3 & 4 - Plus and Minus Controls - These are to increase/decrease the temperature and the time required.

 
5 - Time/Temperature Toggle button - This is used to cycle the display between the current cooking temp or the remaining time.

6 - Preset Setting Button - Use this to select one of the preset settings. Cycle through them until the the desired setting is selected.

Control Panel

Preset Air Fryer Settings

⚠ IMPORTANT : Please ensure food coming from the Air Fryer is always fully cooked through and are steaming hot throughout the item.

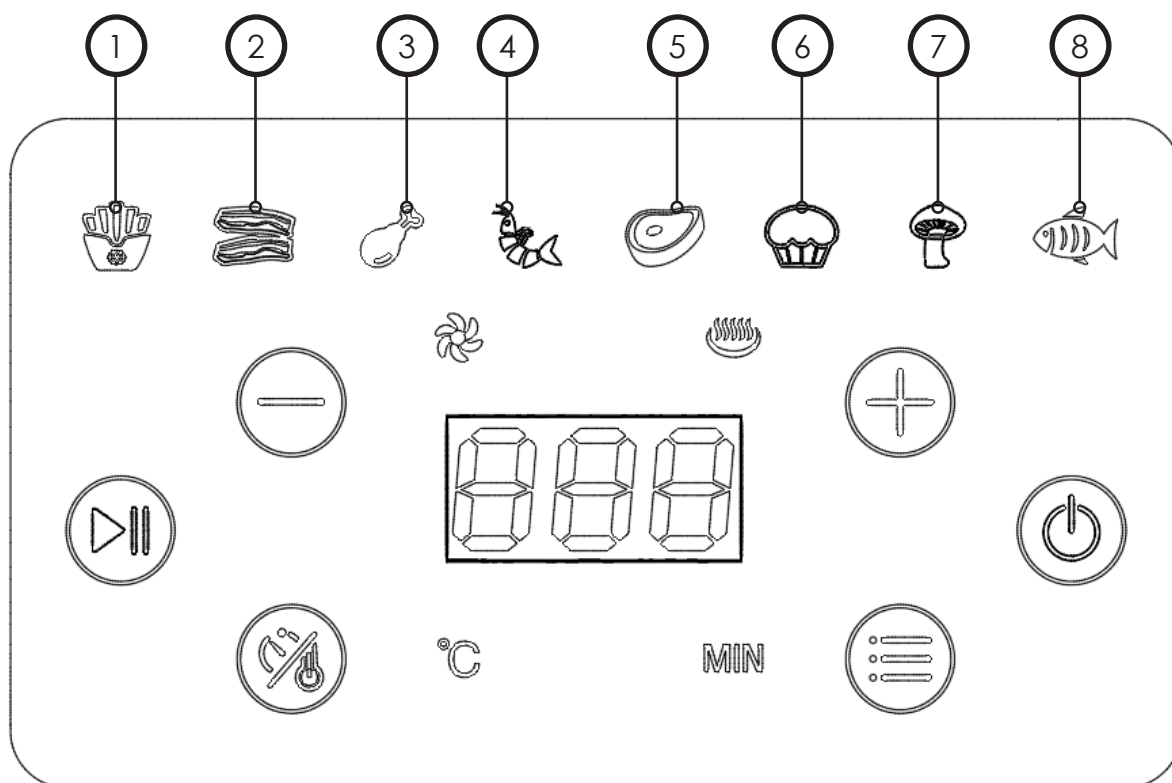

Number	01	02	03	04	05	06	07	08
Menu	Fries	Bacon	Chicken Drumsticks	shrimp	Steak	Muffin	Vegetables	Fish
Temperature	200	160	180	180	200	180	160	180
Time	15	08	20	06	08	12	12	12
Turn over Reminder	After 8 Minutes		After 10 Minutes		After 5 Minutes		After 7 Minutes	

Control Panel

Suggested Air Fryer Settings

! IMPORTANT : Please ensure food coming from the Air Fryer is always fully cooked through and are steaming hot throughout the item.

The table below will help you to select the basic settings for the ingredients.

Note: Keep in mind that these settings are indications. As ingredients differ in origin, size, shape as well as brand, we cannot guarantee the best setting for your ingredients. Because the Rapid Air technology instantly reheats the air inside the appliance instantly. Pulling the drawer briefly out of the appliance during air frying barely disturbs the process.

Tips

- Smaller ingredients usually require a slightly shorter preparation time than larger ingredients.
- A larger amount of ingredients only requires a slightly longer preparation time, a smaller amount of ingredients only requires a slightly shorter preparation time.
- Shaking smaller ingredients halfway through the preparation time optimizes the end result and can help prevent unevenly fried ingredients.
- Add some oil to fresh potatoes for a crispy result. Fry your ingredients in the Hot-air fryer within a few minutes after you added the oil.
- Snacks that can be prepared in a oven can also be prepared in the Hot-air fryer
- The optimal amount for preparing crispy fries is 500 grams.
- Use pre-made dough to prepare filled snacks quickly and easily. Pre-made dough also requires a shorter preparation time than home-made dough.
- Place a baking tin or oven dish in the Hot-air fryer basket if you want to bake a cake or quiche or if you want to fry fragile ingredients or filled ingredients
- You can also use the Hot-air fryer to reheat ingredients. To reheat ingredients, set the temperature to 150°C for up to 10 minutes.

	Min-max Amount (g)	Time (min.)	Temperature (°C)	Shake	Extra Information
Potato & fries					
Thin frozen fries	300-400	15-20	200	shake	
Thick frozen fries	300-400	20-25	200	shake	
Potato gratin	500	20-25	200	shake	
Meat & Poultry					
Steak	100-500	8-15	200		
Pork chops	100-500	15-20	180		
Hamburger	100-500	15-20	180		
Sausage roll	100-500	13-15	200		
Chicken Drumsticks	100-500	15-22	180		
Chicken breast	100-500	15-20	180		
Snacks					
Spring rolls	100-400	8-10	200	shake	Use oven-ready
Frozen chicken nuggets	100-500	10-15	200	shake	Use oven-ready
Frozen fish fingers	100-400	15-20	200		Use oven-ready
Frozen bread crumbed					
cheese snacks	100-400	8-10	180		Use oven-ready
Stuffed vegetables	100-400	10-15	160		
Baking					
Muffins	300	12-18	180		Use baking tin
Sweet snacks	400	20	160		Use baking tin/oven dish

 
 
Machine Setup

Assemble Air Fryer

Place the crisping insert into the bottom of the Air Fryer Drawer. This **MUST** always be installed in the machine when operating.

Then slide the drawer into the body of the Air Fryer as shown below.

The machine can now be plugged in and used. When connecting to a power source always ensure the switch is off.

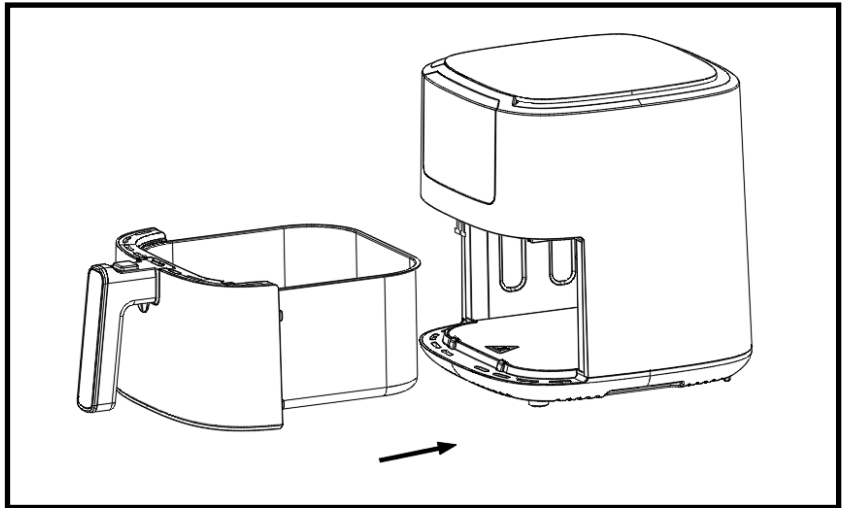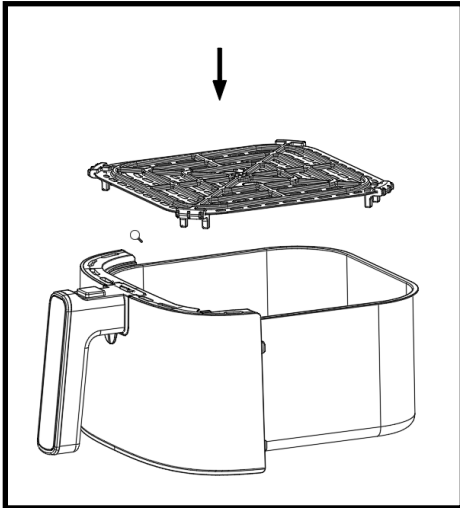

Operation

 
 
Machine Operation

After your Air Fryer Crisping tray is inserted and machine is plugged in, you're now ready.

1. Press the drawer release button (A) and pull the drawer out of the main body of the machine. Now put the food you wish to cook in the drawer on the Crisping Insert. Replace the drawer into the machine.
2. Turn the machine on by Pressing the Power Button (1)
3. Select your desired cooking settings, whether that is using the presets (button 6) or making a manual selection using buttons 3, 4 & 5.
4. Press the Start button (2). The machine will now start cooking the food within the drawer.

To pause the machine during a cooking cycle press the Start/Pause button (2).

When the machine has finished cooking, it will turn off, but if your food is cooked before the timer finishes, just hold the Power Button (1) for 2 seconds to turn off.

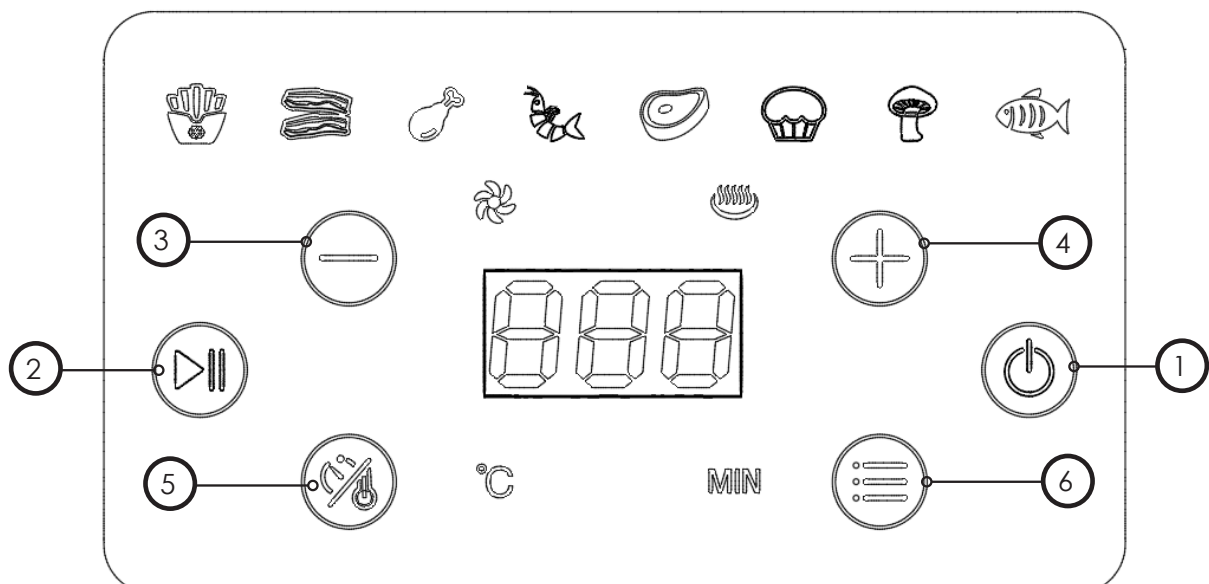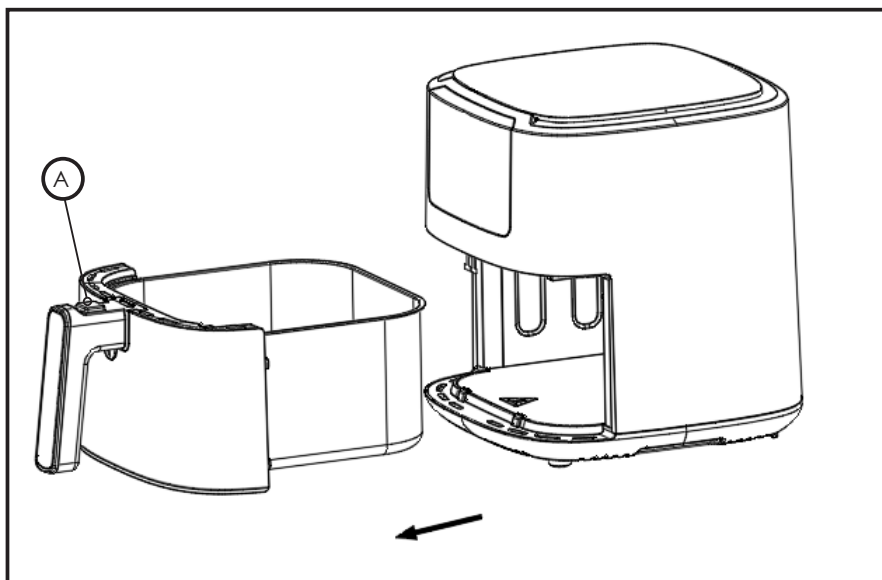

Maintenance & Care

Cleaning

⚠ WARNING : Always ensure the machine is cool to the touch before you start any cleaning

⚠ WARNING : NEVER fill the drawer with liquids and power up the machine. This will cause damage to both the operator and the machine.

The drawer and the Crisping Insert are using a non-stick coating. Do not use metal kitchen utensils or abrasive cleaning materials to clean them, as this may damage the non-stick coating.

1. Remove the mains plug from the wall socket and let the appliance cool down.

Note: Remove the drawer to let the Hot-air fryer cool down more quickly.

2. Wipe the outside of the appliance with a moist cloth. You can use degreasing liquid to remove any remaining dirt.

Tip: If dirt is stuck to the Removable Crisping Insert or the bottom of the pan, fill the pan with hot water with some washing-up liquid. Put the Removable Crisping Insert in the pan and let the pan and the Removable Crisping Insert soak for approximately 10 minutes.

3. Clean the inside of the appliance with hot water and non-abrasive sponge.
4. Clean the heating element with a cleaning brush to remove any food residues.

Note: The Drawer, Drawer handle, release button and crisping insert are dishwasher-proof

Storage

Unplug your machine and allow to cool completely.

Store your machine in any cool dry environment, and always ensure it's clean when it's put into storage. This will mean no food residue will go bad during storage, and it will be ready to use when needed.

Maintenance & Care

Trouleshooting

Problem	Possible cause	Solution
The Hot-air fryer does not work	The appliance is not plugged in.	Put the mains plug in polarized outlet.
The ingredients fried with the air fryer are not done.	The amount of ingredients in the Removable Crisping Insert is too big.	Put smaller batches of ingredients in the Removable Crisping Insert. Smaller batches are fried more evenly.
	The set temperature is too low.	Increase cooking temperature (see section 'settings' in chapter 'Using the appliance').
	The preparation time is too short.	Increase cooking time (see section 'Settings' in chapter 'Using the appliance').
The ingredients are fried unevenly in the air fryer.	Certain types of ingredients need to be shaken halfway through the preparation time.	Ingredients that lie on top of or across each other (e.g. fries) need to be shaken halfway through the preparation time. See section 'Settings' in chapter 'Using the appliance'.
Fried snacks are not crispy when they come out of the air fryer.	You used a type of snacks meant to be prepared in a traditional deep fryer.	Use oven snacks or lightly brush some oil onto the snacks for a crispier result.
	The Removable Crisping Insert is not placed in the pan correctly.	Push the Removable Crisping Insert down into the pan until you hear a click.
White smoke comes out of the appliance.	You are preparing greasy ingredients.	When you fry greasy ingredients in the air fryer, a large amount of oil will leak into the pan. The oil produces white smoke and the pan may heat up more than usual. This does not affect the appliance or the end result.
	The pan still contains grease residues from previous use.	White smoke is caused by grease heating up in the pan. make sure you clean the pan properly after each use.
Fresh fries are fried unevenly in the air fryer.	You did not use the right potato type.	Use fresh potatoes and make sure they stay firm during cooking.
	You did not rinse the potato sticks properly before you fried them.	
	Rinse the potato sticks properly to remove starch from the outside of the sticks.	
Fresh fries are not crispy when they come out of the air fryer.	The crispiness of the fries depends on the amount of oil and water in the fries.	Make sure you dry the potato sticks properly before you add the oil.
		Cut the potato sticks smaller for a crispier result.
		Add slightly more oil for a crispier result.

Contact

Need Help? Talk To Our Experts

Our friendly aftersales team will be more than happy to help you



Phone

Call our team on 01646 687 880



Email

aftersales@hyundaipowerproducts.co.uk



Online Live Chat

Go to www.hyundaipowerproducts.co.uk



Post

Genpower Ltd, Isaac Way, Pembroke Dock, Pembrokeshire, SA72 4RW.



Hyundai Support Website

Go to hyundaisupport.co.uk

Replacement Parts & Spares Info



 No hassle returns  Over 10,000 spare parts  Same day dispatch*



QR Code – Scan the QR code for a direct link to our website

Our Website : power-spares.co.uk

Call us : 01646 404406

Email us : sales@power-spares.co.uk

To maintain your machine in peak operating condition, proper maintenance and care are crucial. Some machines have consumable parts that will need replacement to ensure they continue operating at their full potential. Power-Spares provide manufacturer parts for all your machines, ensuring they remain in peak condition.

About Us

Power-Spares has your back if you damage your lawn mower blade, find your spark plugs not sparking, or snap your recoil. Power-Spares operates under the trading name of Genpower Limited.

As part of the Genpower family, Power-Spares offers you the expertise, efficiency, and quality assurance of a large organisation. We leverage the latest warehousing, distribution, customer service, and inventory management technology to ensure you receive your parts as quickly as possible.

With extensive stock-holding of spare parts in our UK warehouses, Power-Spares is ready to assist you promptly when your machine needs repair. We're Committed to help you get back up and running as quickly as possible.

Recycling & Disposal

WEEE Information



We do not offer a takeback scheme for the recovery of Waste Electrical Electronic Equipment (WEEE) & Batteries. Instead the responsibility to dispose of WEEE and/or Batteries is passed onto you by us.

So when it becomes necessary to dispose of your machine you must take it to your local Civic Amenity Site. For further information please contact your local Authority for disposal advice.

You MUST make sure that all unused oil and fuel is disposed of correctly either beforehand or at your local Civic Amenity Site.

- Under NO circumstances must any fuel or oil be put down any drains.
- Certain products contain WEEE waste which should not be disposed of in your domestic waste.
- You MUST recycle WEEE in accordance with your local authority or recycling centre.
- Certain products contain batteries which should not be disposed of in your domestic waste.
- You MUST recycle batteries in accordance with your local authority or recycling centre.
- Unwanted packaging and materials should be stored and taken to a recycling centre so it can be disposed of in a manner which is compatible with the environment.

We are a Member of the VALPAK National Compliance Scheme and our registration number is RM08660. For further information about disposal please contact your Local Authority.

You can also get more advice and guidance about recycling at the following website <http://www.recycle-more.co.uk>

Should you pass this product on to another user either sold or loaned, you MUST pass on this user manual. This will make sure that all other users can use and maintain this machine safely.

Environmental Protection

1. Environmental protection should be a priority of considerable importance when using the machine, for the benefit of both social coexistence and the environment in which we live. Try not to cause any disturbance to the surrounding area.
2. You must comply with local regulations and provisions for the disposal of packaging, oils, petrol, filters, damaged parts or any elements which have a strong impact on the environment. This waste must not be disposed of as normal waste. It needs to be separated and taken to specified waste disposal centres where the material will be recycled.
3. You must comply with local regulations for the disposal of waste materials after mowing.
4. When disposing, do not pollute the environment with the machine, but hand it over to a disposal centre, in accordance with the local laws in force.

Technical Data

Specification

Model	HYAF5001DB
Voltage (V)	220-240
Frequency (Hz)	50-60
Wattage (w)	1500
Basket Capacity (L)	5
Tempurature Range (°C)	80-200
Timer Range (Mins)	0-60

Declaration of Conformity

EU DECLARATION OF CONFORMITY		CE	HYUNDAI POWER PRODUCTS	UK CA	UK DECLARATION OF CONFORMITY
1.	PRODUCT(S) COVERED BY THIS DECLARATION:	Product: UK Product Code No. Factory Reference No.	Hyundai Air Fryer HYAF5001DB AF-511A		
2.	IDENTIFICATION DETAILS OF MANUFACTURER:	Name: Address: Country:	Genpower Ltd. (T/A: JCB Tools) Isaac Way Pembroke Dock, SA72 4RW UK		
	AUTHORISED REPRESENTATIVE:	Name: Address: Country:	Genpower Ltd. 131 Boulevard Pereire 75017 Paris France		
3.	THIS DECLARATION OF CONFORMITY IS ISSUED UNDER THE SOLE RESPONSIBILITY OF THE MANUFACTURER				
4.	OBJECT OF THE DECLARATION:	Product: Function:	1500W Air Fryer Cooking and reheating food		
5i.	THE OBJECT OF THE DECLARATION DESCRIBED IN POINT 4 IS IN CONFORMITY WITH THE RELEVANT UNION HARMONISATION LEGISLATION:	2023/826 (EU) 2014/30/EU 2014/35/EU 1907/2006/EC 1935/2004/EC 2011/65/EU	Ecodesign Requirements The Electromagnetic Compatibility Directive The Low Voltage Directive Registration, Evaluation, Authorisation and Restriction of Chemicals Requirements for plastic materials and articles intended to come into contact with food The Restriction of Hazardous Substances Directive		
5ii.	THE OBJECT OF THE DECLARATION DESCRIBED IN POINT 4 IS IN CONFORMITY WITH THE RELEVANT UK STATUTORY INSTRUMENTS:	2010/2617 2016 No. 1091 2019 No. 758 2016 No. 1101 2012 No. 3032	Ecodesign for Energy-Related Products Regulations 2010 The Electromagnetic Compatibility Regulations 2016 Registration, Evaluation, Authorisation, and Restriction of Chemicals Regulation 2019 The Electrical Equipment (Safety) Regulations 2016 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012		
6.	REFERENCES TO THE RELEVANT HARMONISED SAFETY STANDARDS USED OR REFERENCES TO THE OTHER TECHNICAL SPECIFICATIONS IN RELATION TO WHICH CONFORMITY IS DECLARED:	EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN IEC 61000-3-2:2019+A1+A2 EN 61000-3-3:2013+A1+A2 EN 60335-1:2012+A11+A13+A1+A14+A2+A15 EN 60335-2-9:2023+A11:2023 EN 62233:2008 BS 1363-1:2016+A1:2018	Industrial, scientific and medical equipment. Radio-frequency disturbance characteristics. Limits and methods of measurements Electromagnetic compatibility. Requirements for household appliances, electric tools and similar apparatus. Immunity Electromagnetic compatibility (EMC). Limits. Limits for harmonic current emissions (equipment input current ≤ 16 A per phase) Electromagnetic compatibility (EMC). Limits. Limitation of voltage changes, voltage fluctuations and flicker in public low-voltage supply systems, for equipment with rated current ≤ 16 A per phase and not subject to conditional connection Household and similar electrical appliances. Safety - General requirements Household and similar electrical appliances. Safety - Particular requirements for grills, toasters and similar portable cooking appliances Measurement methods for electromagnetic fields of household appliances and similar apparatus with regard to human exposure 13A plugs, socket-outlets, adaptors and connection units - Specification for rewirable and non-rewirable 13A fused plugs		
7.	ADDITIONAL INFORMATION. THE TECHNICAL DOCUMENTATION FOR THE MACHINERY IS AVAILABLE FROM:	Name: Address: Country:	Genpower Ltd. 131 Boulevard Pereire 75017 Paris France		
SIGNED FOR AND ON BEHALF OF: PLACE OF ISSUE: DATE OF ISSUE: NAME: FUNCTION: SIGNATURE:		Genpower Limited WALES, UK 20/01/2026 ROLAND J. LLEWELLIN MANAGING DIRECTOR <i>RJLlewelin</i>			

Useful Information

Check Out Our YouTube Channel

Our videos on YouTube include:

- Unboxing
- Assembly of your machine
- How to service your machine
- Products in use
- 'How To' videos
- Product features

Go to YouTube and search 'Hyundai Power Products'.

Warranty

Proof of purchase will be required before you make a warranty claim. Full warranty terms and conditions can be found on the HYUNDAI POWER PRODUCTS website: www.hyundaipowerproducts.co.uk

Manual Updates

Our manuals are constantly being reviewed and updated. Should you find an error, omission or something unclear, please contact us for assistance. We reserve the right to make any modifications without prior notice whenever necessary.

Our latest manuals are also placed online. All our manuals can be downloaded at: www.hyundaipowerproducts.co.uk

Returning Your Product

If you are returning your product, please contact the dealer for their returns policy.

Leaving A Review

We work very hard to give all of our customers the best possible service. If you have any problems, before leaving negative feedback, please contact us to give us a chance to resolve the issue. We would be delighted if you left us positive feedback! To leave a review, please go to: uk.trustpilot.com/review/hyundaipowerequipment.co.uk

Ordering Spare Parts

You can find the spare part you are looking for at power-spares.co.uk

Product Record

Information

As soon as you have purchased the machine, we recommend that you fill out the following. If you need to contact an authorised dealer or customer service for information on servicing, you may need to provide the following information.

Date Of Purchase:.....

Dealer Name:.....

Dealer Phone:.....

Model Number:.....

Serial/Batch Number:.....

Notes

[illegible]

Notes

[illegible]

Notes

This image shows a full page of blank, lined paper. It features approximately 28 horizontal blue or grey lines spaced evenly apart, typical of standard notebook paper. The lines extend across the entire width of the page, leaving small margins at the top and bottom. There are no vertical lines, text, or other markings present.

HYUNDAI

APPLIANCES



GENUINE PRODUCT OF
HYUNDAI CORPORATION

For Inquiries, Please Contact:
GENPOWER LTD
Isaac Way, London Road,
Pembroke Dock, UK, SA72 4RW.
T: +44 (0) 1646 687 880
E: info@hyundaipowerproducts.co.uk
www.hyundaipowerproducts.co.uk

Imported / Distributed by Genpower Ltd for
the United Kingdom & Ireland

Licensed by Hyundai Corporation Holdings, Korea