

HYUNDAI
APPLIANCES

**800W 20L Microwave
HYMW80020**

USER MANUAL



GENUINE PRODUCT OF
HYUNDAI CORPORATION



WARNING: Read the instructions carefully before use.

Iss: Sept/25

Contents

| | | | |
|---|-------------|---|--------------|
| Introduction..... | 3 | Cleaning..... | 28 |
| Safety Information..... | 4-11 | Troubleshooting..... | 29 |
| Understand your Machine..... | 4 | Replacement Parts/Spares Information... | 30 |
| Personal Safety..... | 4-5 | Technical Data..... | 31 |
| During Use..... | 5-6 | Recycling & Disposal..... | 32 |
| Precautions to Avoid Exposure To Excessive Microwave Energy..... | 6 | Declaration of Conformity..... | 33 |
| Electricity – Grounding..... | 7 | Notes..... | 34-35 |
| Electricity Safety..... | 7-8 | Useful Information..... | 36 |
| Double-Insulated Appliances..... | 8 | Our YouTube Channel..... | 36 |
| Residual Risks..... | 9 | Warranty..... | 36 |
| Radio Interference..... | 9 | Manual Updates..... | 36 |
| Intended Use..... | 10 | Returning Your Product..... | 36 |
| Symbols on the Machine..... | 11 | Leaving A Review..... | 36 |
| Unboxing..... | 12 | Ordering Spare Parts..... | 36 |
| Before First Use..... | 13 | Product Record..... | 37 |
| In The Box/Features..... | 14 | Contact Us..... | 38 |
| Cooking Utensils Guide..... | 15 | | |
| Control Panel..... | 16 | | |
| Operation..... | 17 | | |
| Initial Instructions..... | 17 | | |
| Setting The Clock..... | 17 | | |
| Setting The Timer..... | 18 | | |
| Express Cooking..... | 18 | | |
| Using The +30 SEC. Function..... | 19 | | |
| Microwave Cooking..... | 19-20 | | |
| Defrosting Overview..... | 21 | | |
| Using The Time Defrost Function..... | 21 | | |
| Using The Weight Defrost Function.. | 22 | | |
| Multistage Cooking..... | 23-24 | | |
| Using The Auto Cook Function..... | 25 | | |
| Child Lock Function..... | 26 | | |
| Button Adhesion Protection..... | 26 | | |
| Wave Guide Maintenance..... | 27 | | |

Introduction

Thank You For Purchasing Your HYUNDAI Product

We work very hard to give all of our customers the best possible service. If you have any problems, before leaving negative feedback, please contact us to give us a chance to resolve the issue. We would be delighted if you left us positive feedback! Thank you for purchasing this product.

Important!



WARNING: READ THE INSTRUCTION BOOKLET THOROUGHLY BEFORE USING THE MACHINE. Keep for future reference and pass it on if the machine is loaned or sold to another user.

This manual has been produced by Hyundai Home Appliances and should be kept with the product. Please read and understand these instructions before you use your product. Failure to do this may result in personal injury or damage to the product.

The safety precautions and warnings are to ensure your safety and protect you from harm or damage to the product.

The information contained in this manual was accurate at the time of production, however HYUNDAI Home Appliances may make modifications to the product without notification.

Safety Information

Understand Your Machine

- **WARNING!** You must read these instructions carefully before operating the machine. Make sure that you are familiar with the controls and properly operate the machine. You must learn how to stop the machine quickly. If you do not follow the warnings and instructions, it may result in fire and/or serious injury. Make sure to save all warnings and instructions for future reference.
- Read this manual and labels affixed to the machine to understand its limitations and potential hazards.
- Be thoroughly familiar with the controls and their proper operation. Know how to stop the machine and disengage the controls quickly.
- If the unit is to be used by someone other than original purchaser, or is to be loaned, rented, or sold, always provide this manual and any needed safety training before operation. The user can prevent and is responsible for accidents or injuries that may occur to themselves, to other people, or to property.
- Do not force the machine beyond its limits. Use the correct machine for your application.
- Know how to stop the machine quickly in case of emergency. Understand the use of all controls.
- ALL MAINTENANCE other than that listed in this manual, should be carried out by professionally trained and certified personnel.
- When using this machine for the first time and you **MUST** read through this Instruction Manual and understand the labels affixed to the microwave.

Personal Safety/Important Safety Information

- Ensure that the main circuit voltage matches the appliance's rating before use.
- If the power cord or appliance is damaged, stop using it immediately and contact the manufacturer, an authorised service agent, or a qualified professional for assistance.
- **WARNING!** Do not let the cord hang over the edge of a table or counter. The microwave may be pulled off, which could cause serious injury, particularly to children, or result in entanglement with the user.
- **DO NOT** carry the appliance by the power cord.
- Avoid pulling the plug by the cord, as it may damage the plug or cable.
- Switch off the appliance at the wall socket and unplug it when not in use or before cleaning.
- Only use accessory attachments supplied with the product; the use of other accessories is not recommended.
- **DO NOT** use extension cords with this appliance.
- Close supervision is necessary when children are near or using the appliance.
- Children should not play with the appliance.
- This appliance can be used by children aged 8 years or older, as well as individuals with reduced physical, sensory, or mental capabilities, provided they are supervised or instructed on its safe use and understand the associated risks.
- Cleaning and maintenance should not be performed by children without supervision.

Safety Information

Personal Safety/Important Safety Information (Continued)

- Carefully read these instructions before using your HYUNDAI appliance.
- Use caution when the appliance is near pets.
- Use this product only for its intended purpose.

During Use

- **WARNING!** - Do not heat liquids or food in sealed containers, as they may explode. Always ensure a small gap is created between any container and its lid to reduce any build up of pressure.
- **DO NOT** put metal in the microwave. Metal can cause sparks and increase the risk of fire.
- **DO NOT** use recycled paper and trays. Recycled paper products can contain tiny flecks of metal that can ignite and resort to arcing.
- Be cautious when heating beverages, as microwave heating can cause delayed eruptive boiling, which may occur after the container is removed.
- Do not fry food in the microwave. Hot oil can damage the oven and utensils, and may cause burns.
- Eggs in their shell, or whole hard-boiled eggs, should not be heated in the microwave as they can explode even after heating has finished.
- Pierce foods with thick skins (e.g., potatoes, squashes, apples, chestnuts) before cooking to prevent bursting
- Stir or shake the contents of feeding bottles and baby food jars, and always check the temperature before serving to avoid burns.
- Cooking utensils can become hot due to heat transfer from food. Use potholders if necessary.
- Ensure that utensils used in the microwave are suitable for microwave use.
- **WARNING!** — Only a trained professional should perform any service or repair that requires the removal of protective covers to prevent exposure to microwave energy.
- This product is classified as Group 2, Class B ISM equipment. Group 2 includes all ISM (Industrial, Scientific, Medical) equipment that generates and/or uses radio-frequency energy for material processing. Class B equipment is intended for use in residential environments and those connected to a low-voltage power supply.
- This appliance should not be used by individuals (including children) with reduced physical, sensory, or mental capabilities, or lack of experience, unless supervised by someone responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- The microwave oven is designed for freestanding use only.
- **WARNING!** — Do not install the oven over a cooktop or other heat-producing appliance, as this may damage the microwave and void the warranty.
- The microwave should not be placed inside a cabinet.
- **WARNING!** — The appliance and accessible parts become hot during use.
- **WARNING!** — Accessible parts may become hot during operation. Keep young children away.
- During operation, the appliance becomes hot. Take care to avoid touching heating elements inside the oven.
- Surfaces of the microwave may become hot while in use.

Safety Information

During Use

- The appliance should be placed against a wall.
- The appliance should not be used by children or individuals with reduced capabilities unless they are supervised.
- **WARNING!** — If the door or door seals are damaged, the microwave must not be operated until it has been repaired by a qualified technician.
- This appliance is not intended to be operated by an external timer or a separate remote-control system.
- **DO NOT** run the microwave when it is empty. The energy created will damage the microwave's components.
- The microwave oven is for household use only and is not designed for commercial applications.
- Do not remove the distance holder on the back or sides of the microwave, as it ensures proper air circulation by maintaining a minimum distance from the wall.
- Secure the turntable before moving the microwave to prevent damage
- **CAUTION!** — Only specialists should attempt repairs or maintenance involving the removal of protective covers, as this could expose them to microwave radiation. This also applies to replacing the power cord or lighting. In such cases, send the appliance to the our dedicated Aftersales team.
- The microwave is intended for defrosting, cooking, and steaming food only.
- Use oven mitts when handling heated food.
- Be cautious of escaping steam when opening lids or removing foil.
- If smoke is emitted, switch off or unplug the microwave immediately, and keep the door closed to stifle any flames.

Precautions to Avoid Exposure To Excessive Microwave Energy

- Never attempt to operate the microwave with the door open, as this can lead to harmful exposure to microwave energy. Do not tamper with or bypass the safety interlocks.
- Ensure no objects are placed between the microwave's front face and the door, and prevent dirt or cleaning residue from building up on the sealing surfaces.
- Do not use the microwave if it is damaged. It is essential that the door closes properly and that there is no damage to: a) The door (including any bending), b) Hinges or latches (broken or loose), c) Door seals and sealing surfaces.
- Only qualified service personnel should adjust or repair the microwave.

Safety Information

Electricity – Grounding Instructions

IMPORTANT: This appliance must be grounded. It is equipped with a cord that includes a grounding wire and a grounding plug. The plug must be inserted into a properly installed and grounded wall outlet.

Grounding helps reduce the risk of electric shock by providing a safe path for electrical current in the event of a short circuit.

It is recommended to use a dedicated circuit that serves only the microwave oven. Using higher voltage can be dangerous and may cause a fire or other damage to the oven.

WARNING: Improper use of the grounding plug may result in electric shock.

NOTE:

1. If you have any questions regarding grounding or electrical instructions, consult a qualified electrician or service technician.
2. The manufacturer and dealer are not liable for any damage to the oven or personal injury caused by failure to follow the electrical connection instructions.

The wiring in the mains cable follows this colour code:

- Green and Yellow = Earth
- Blue = Neutral
- Brown = Live

Electrical Safety

DANGER : ELECTRICITY CAN KILL – NEVER WORK ON LIVE / ENERGISED EQUIPMENT.



- Prior to carrying out any maintenance work you **MUST** identify electrical isolation methods and isolate all electrical supplies.
- Prior to use and with all electrical supplies isolated, you **MUST** check all electrical cables, plugs and connectors for the following;
 - Are intact and have no signs of damage, to include but not limited to bare wires, chaffing, cuts and loose wiring.
 - If there are any signs of damage, the damaged item **MUST** be taken out of service until the damage has been repaired by an electrically competent person.
 - All trailing cables should be routed so as not to cause any kind of trip hazard.
 - **NEVER** work on or near electricity with wet hands, wet clothing and wet gloves.

Safety Information

Electrical Safety (Continued)

- The appliance plug must match the outlet. Never modify the plug in any way. DO NOT use any adapter plugs with earthed (grounded) appliances. Unmodified plugs and matching outlets will reduce risk of electric shock.
- DO NOT expose this appliance to rain or wet conditions. Water entering an appliance will increase the risk of electric shock. DO NOT abuse the power cord. Never use the cord for carrying, pulling or unplugging the appliance. Keep the cord away from heat, oil and sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- **IMPORTANT:** Make sure that the electric circuit is fused, and that the power, voltage and frequency of the motor is supported by your mains supply. Also, make sure that your power supply is earthed. Connect your machine to earth. Never open the ON/OFF switchbox. However, if it should become necessary to do so, contact a qualified electrician. Make sure that you will never touch live contacts, specifically when you plug or unplug your machine. This appliance and its power cord must never get into contact with water.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not allow any part of the machine to make contact with water while it is in operation. If the appliance becomes wet while turned off, wipe dry before starting.

Double-Insulated Appliances

In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means that it is already provided on a double-insulated appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should be performed only by qualified service personnel. Replacement parts for a double-insulated appliance must be identical to the parts they replace.

Safety Information

Residual Risks

▲ WARNING! This machine produces an electromagnetic field during operation. This field may under some circumstances interfere with active or passive medical implants. To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their physician and the medical implant manufacturer before operating this machine.

Radio Interference

NOTE: The operation of the microwave oven may cause interference with radios, televisions, or similar electronic devices. If interference occurs, you can try the following measures to reduce or eliminate it:

- Clean the microwave oven's door and sealing surfaces.
- Reorient the antenna of the affected radio or television.
- Relocate the microwave oven to a different position relative to the receiver.
- Move the microwave oven further away from the receiver.
- Plug the microwave into a different outlet to ensure the microwave and receiver are on separate circuits.

Safety Information

Intended Use

The HYMW80020 is an 800W microwave with 20L of oven capacity from HYUNDAI.

The machine is manufactured according to the latest safety requirements. Every precaution is only effective when it is followed exactly.

Intended Use

This appliance is designed to heat, cook or dry and defrost food. ALWAYS cook and defrost food according to the manufacturer's recommended instructions.

This machine is not suitable for environments with an ambient temperature in excess of 32°C

User Types

This machine is intended for use by consumers, i.e. non professional operators. The machine is intended for "DIY" and domestic use only.




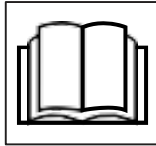


Improper Use

Any other usage not in keeping with the above mentioned ones may be hazardous and harm persons and/or damage things.

Safety Information

Symbols On The Machine

We have provided safety messages in this manual and on the machine. This information alerts you to potential hazards that could hurt you or others. Please read these messages carefully. However, we may not have listed all of the possible hazards, you must also use your own judgement.

| Symbol | Description | Symbol | Description |
|---|--|--|---|
|  | Disposal. |  | The UKCA (UK Conformity Assessed) marking is a UK product marking that is required for goods being placed on the market in Great Britain (England, Wales and Scotland). |
|  | This product complies with the European directives and an evaluation method of conformity for these directives was done. |  | To reduce the risk of injury, the user must read and understand owner's manual before using this product. |
|  | Do not expose to rain or use in damp conditions. |  | The appliance, associated components and packaging should be sorted, taken to the local recycling centre and disposed of in an environmentally safe way. |

Unboxing

⚠ WARNING : Unboxing and assembling the machine should be done on a flat, surface with enough room. Disposal of the packaging should be done in accordance with the local regulations in force.

⚠ WARNING : Some of the packaging material may be harmful to children. Keep out of reach of children.

1. Carefully remove the product from the packaging and examine it for any sign of damage caused during shipping.
2. Lay the contents out and check them. If any part is damaged or missing, you must not use the machine. Contact HYUNDAI HOME APPLIANCES immediately.
3. You must keep the packaging material in case the machine needs to be returned or repaired.
4. Ensure that you have all the accessories and tools you need for assembly and operation including the suitable personal protective equipment.


We recommend that you fill out the information in the 'Product Record' section. If you need to contact an authorised dealer or customer service, you may need to provide this information.

Before First Use

! IMPORTANT : Before using your new microwave for the first time, it is important you read through the entirety of this instruction manual and adhere to the following steps:

1. Ensure all packing materials are removed from inside the door.
2. **WARNING!**—Inspect the oven for any damage, such as a misaligned or bent door, damaged door seals or sealing surfaces, broken or loose hinges and latches, or dents inside the cavity or on the door. If any damage is found, do not use the oven and contact qualified service personnel.
3. Place the microwave on a flat, stable surface that can support both its weight and the heaviest food it may hold.
4. Avoid placing the oven near sources of heat, moisture, high humidity, or combustible materials.
5. To ensure proper operation, allow adequate airflow around the oven. Maintain at least 20 cm of space above, 10 cm at the back, and 5 cm on both sides. Do not block or cover any of the appliance's openings. Do not remove the feet.
6. Do not operate the oven without the glass tray, roller support, and shaft correctly positioned.
7. Ensure the power cord is intact and does not run under the oven or over hot or sharp surfaces.
8. The power socket should remain easily accessible for quick unplugging in case of an emergency.
9. Do not use the microwave outdoors.

In The Box/Features

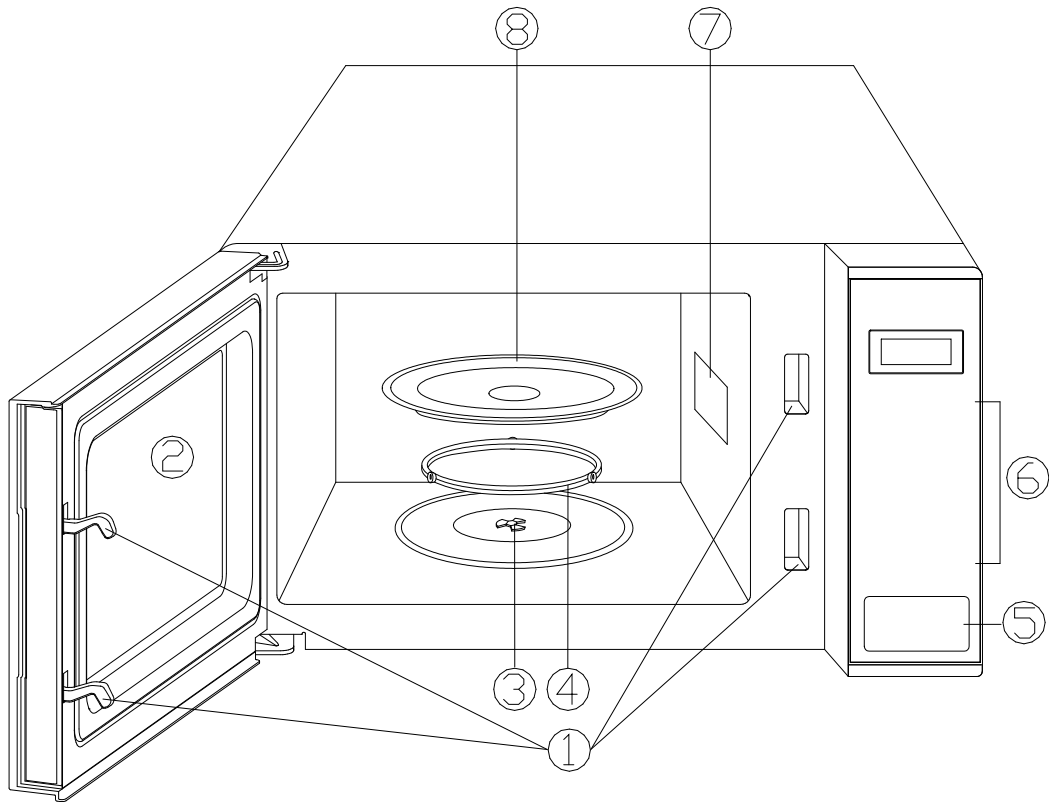

- 1. Door Safety Lock System**
This prevents the user from accidentally opening the door during operation.
- 2. Oven Window**
- 3. Shaft**
This transmits power from the motor to turn the glass turntable.
- 4. Roller Ring**
This carries the weight of the glass tray and allows it to rotate.
- 5. Door Release Button**
Push this to open the microwave door.
- 6. Control Panel**
This allows the user to select the desired setting to operate the microwave.
- 7. Wave Guide**
This transfers and directs the microwaves to the cooking chamber.
- 8. Glass Tray**
Place your food on this in preparation to be cooked or defrosted.

Cooking Utensils Guide

! IMPORTANT : It is vital that you read and understand the below before operating the microwave for the first time and/or using a cooking utensil, which you haven't used before.

! IMPORTANT : Failure to comply with the guidelines set below can cause damage to the microwave, as well as putting the user and other persons close to the appliance in unnecessary danger.

- 1. Avoid Using Metal:** Microwaves cannot penetrate metal. Always use utensils that are specifically labelled as microwave-safe. Do not use metallic containers for food or beverages during microwave cooking unless the manufacturer explicitly specifies the size and shape of metallic containers that are safe for microwave use.
- 2. No Metal Utensils:** Avoid using metal utensils or dishes with metallic trims, as microwaves cannot pass through metal and may cause damage or arcing.
- 3. Recycled Paper Products:** Do not use recycled paper products when cooking in a microwave, as they may contain small metal fragments that can cause sparks or even start a fire.
- 4. Shape of Dishes:** Use round or oval dishes rather than square or oblong ones, as food tends to overcook in the corners of angular dishes.

| Cookware | Microwave Cooking |
|---------------------------------|-------------------|
| Heat-Resistant Glass | Yes |
| Non Heat-Resistant Glass | No |
| Heat-Resistant Ceramics | Yes |
| Microwave-Safe Plastic Dish | Yes |
| Kitchen Paper | Yes |
| Metal Tray | No |
| Metal Rack | No |
| Aluminum Foil & Foil Containers | No |

Control Panel

! IMPORTANT : Please ensure you become familiar with each icon on the control panel before using the microwave for the first time.



- **Display Screen:** Shows time, power level, and function indicators.
- **Auto Cook Menus:** Pre-programmed settings for quickly cooking popular dishes.
- **Clock:** Press to set the current time on the microwave.
- **Time Cook:** Press to program a specific cooking time.
- **Kitchen Timer:** Press to activate the timer function.
- **Time Defrost:** Press to defrost food based on a set time.
- **Weight Defrost:** Press to defrost food based on its weight.
- **Power Level:** Press to adjust the cooking power levels.
- **Number Buttons (0-9):** Use to enter cooking time or food weight; numbers 1-6 can also be used for express cooking programs.
- **Stop/Clear:** Press once to pause cooking or twice to cancel the program.
- **Start/+30 Sec:** Press to begin cooking or press multiple times to add 30-second intervals and cook at full power.

Operation

Initial Instructions

- When the oven is first plugged in, a beep will sound, and the display will show "1:01."
- If no operation is performed within 30 seconds during any setting, the system will automatically return to standby mode.
- During cooking, pressing the STOP/CLEAR button once will pause the program. To resume, press the START/+30 SEC. button. Pressing STOP/CLEAR twice will cancel the program.
- After cooking is complete, the display will show "End," and a beep will sound every two minutes until a button is pressed or the door is opened.
- While the oven is operating, pressing a valid button will result in a single beep, whereas pressing an invalid button will cause the buzzer to sound twice.


Setting The Clock

NOTE: This microwave features a 12- or 24-hour clock. You can choose your preferred format by pressing the **CLOCK** button while in standby mode.

1. In standby mode, press the CLOCK button repeatedly to toggle between the 12- or 24-hour clock format.

2. Use the number buttons to set the correct time.


3. Press the CLOCK (**Top Left of diagram**) or START/+30 SEC. button (**Bottom Right of diagram**) to confirm your selection.

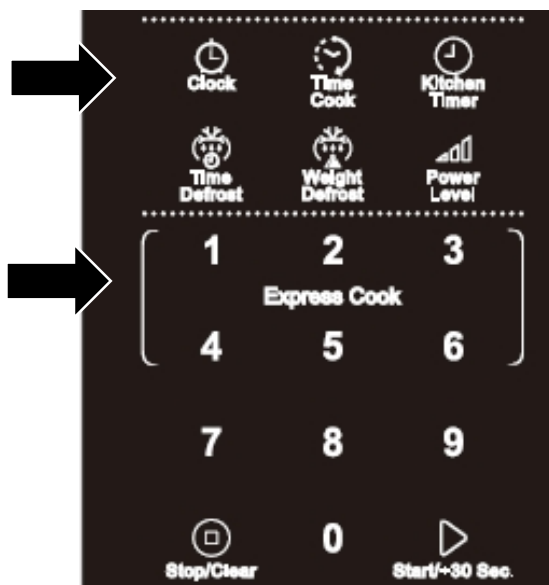

NOTE: During cooking, you can view the current time by pressing the CLOCK button.

Operation

Setting The Timer

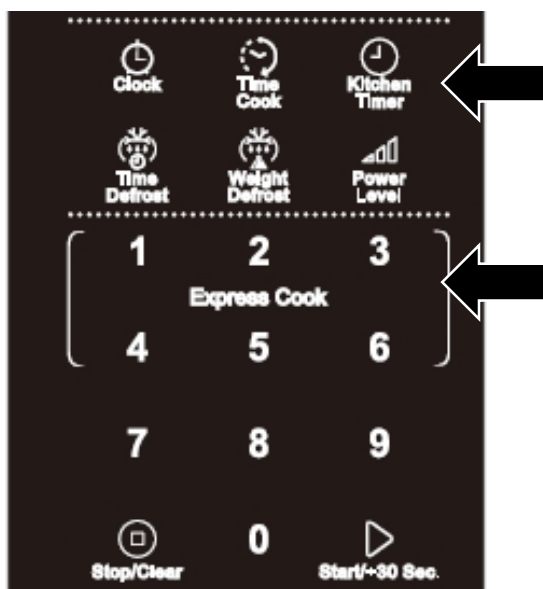

1. In standby mode, during cooking, or while paused, press the **KITCHEN TIMER** button once.


2. Use the number buttons to set the desired time (up to a maximum of 99 minutes and 99 seconds).

3. Press the **START/+30 SEC. (Bottom Right of diagram)** or **KITCHEN TIMER button (Top Right of diagram)** to confirm the desired time range.

NOTE: When the countdown ends, the buzzer will sound to alert you. To check the remaining time, press the KITCHEN TIMER button. To cancel the timer, press the STOP/CLEAR button while the time is displayed.

Express Cooking

In standby mode, pressing a number button (1, 2, 3, 4, 5, or 6) will automatically start a cooking program with the corresponding time (1 minute for 1, 2 minutes for 2, and so on up to 6 minutes). The microwave will begin cooking at full power.

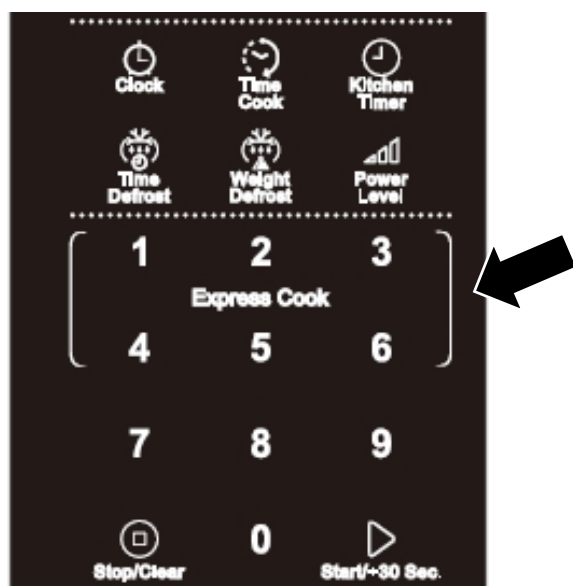

NOTE: Use the number options within the 'Express Cook' section of the control panel to cook an item for the desired amount of time.

Operation

Using The +30 SEC. Function




Use this feature to conveniently program the oven to microwave food at 100% power.

In standby mode, press the **START/+30 SEC.** button repeatedly to set the cooking time, increasing by 30 seconds with each press, up to a maximum of 99 minutes and 99 seconds. The oven will start automatically once the time is set.

Press the **START/+30 SEC.** as many times as needed to cook the food for the required amount of time.

Microwave Cooking

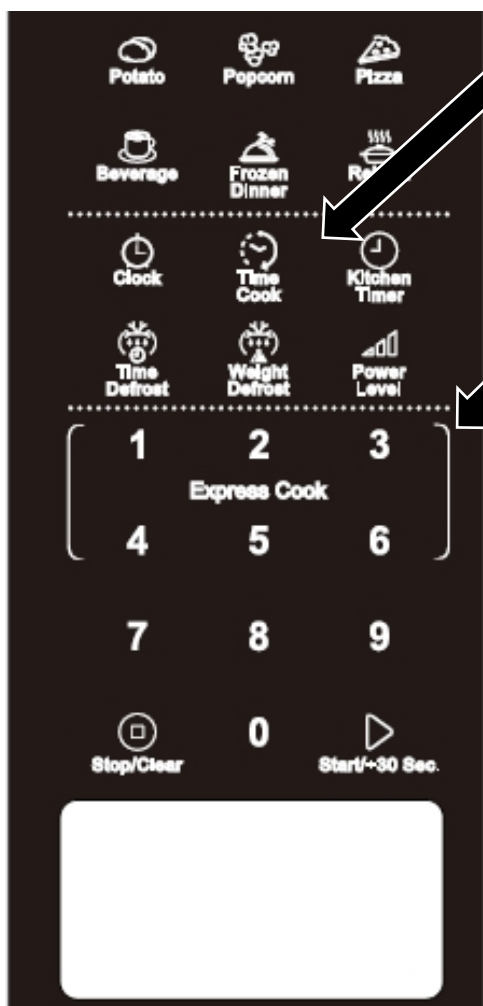


1. To begin, in standby mode, press the **TIME COOK** button once.

2. Use the number buttons to set the cooking time, with a maximum duration of 99 minutes and 99 seconds.

NOTE: Microwave Cooking instructions continued on next page.

Operation

Microwave Cooking (Continued)

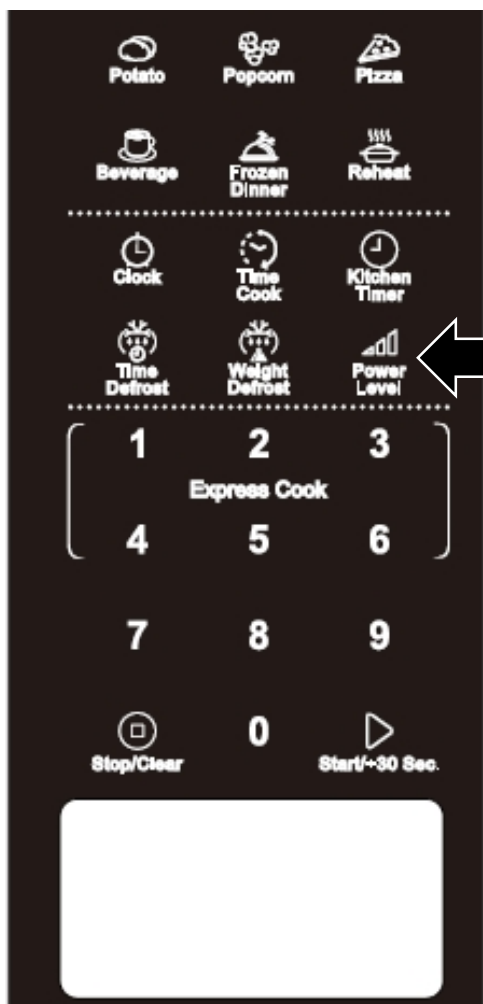

NOTE: The **Power Level** setting gives you a selection of **eleven** levels of power to choose from, according to the food, which needs to be cooked.

Details of each power setting can be found within the table at the bottom of this page.

3. Press the POWER LEVEL button repeatedly to select your desired power level.

4. Press the START/+30 SEC. button (**Bottom Right of diagram**) to begin cooking.

Overview of Power Levels

| Press POWER LEVEL button | Power (Display) | Press POWER LEVEL button | Power (Display) |
|--------------------------|-----------------|--------------------------|-----------------|
| Once | 100% (P100) | 7 times | 40% (P-40) |
| Twice | 90% (P-90) | 8 times | 30% (P-30) |
| 3 times | 80% (P-80) | 9 times | 20% (P-20) |
| 4 times | 70% (P-70) | 10 times | 10% (P-10) |
| 5 times | 60% (P-60) | 11 times | 0% (P-00) |
| 6 times | 50% (P-50) | | |

NOTE: During cooking, you can check the current power level by pressing POWER LEVEL button.

Defrosting Overview

! IMPORTANT : When defrosting food with the use of a microwave, please take the following recommendations into consideration before cooking and consuming the food.


- Check the packaging for any defrosting instructions, if available.
- Remove the packaging (unless otherwise specified), as the chemicals can contaminate the food during thawing and may allow bacteria from the thawing liquid to affect the food, particularly with meat.
- Place the food in a microwavable container or dish and cover it. For liquid foods, such as soup, use a deep bowl to prevent spills.
- Select the specific defrost setting for the type of food you are defrosting, where possible.
- Press start and defrost the food in 1-2 minute increments (or longer for larger pieces), checking to ensure it is thawing evenly.
- Once defrosting is complete, remove the food from the microwave and ensure it is fully thawed, with no ice crystals remaining and the centre temperature not freezing (using a temperature probe).
- Always verify that your food is thoroughly defrosted before cooking. For further precautions and additional defrosting methods, consider reading our article on how to defrost food safely.
- Clean the microwave after defrosting to prevent cross-contamination.

Using The Time Defrost Function

1. To begin, in standby mode, press the TIME DEFROST button once

2. Use the number buttons to set the defrosting time, with a maximum duration of 99 minutes and 99 seconds.

3. Press the START/+30 SEC. button (**Bottom Right of diagram**) to begin defrosting.

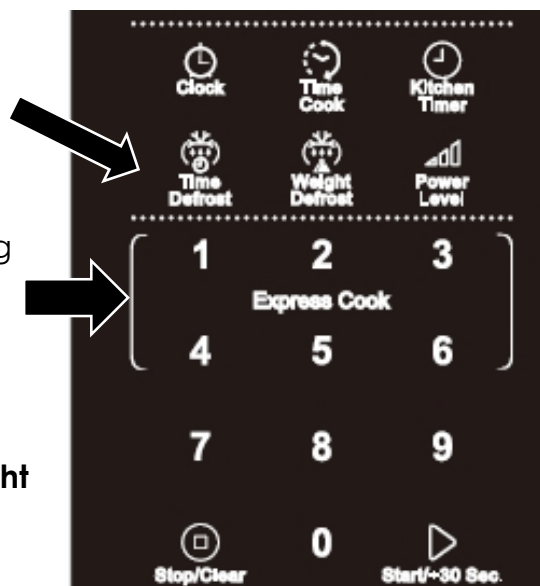

NOTE: During the defrosting process, the system will pause and beep to remind you to turn the food over. After turning the food, press the START/+30 SEC. button to resume defrosting.


Using The Weight Defrost Function

NOTE: The defrosting time and power level are automatically adjusted once the food weight is entered. The weight of the frozen food can range from 100g to 1800g.

1. To begin, in standby mode, press the WEIGHT DEFROST button once.

2. Use the number buttons to enter the food weight.

3. Press the START/+30 SEC. button to begin defrosting.

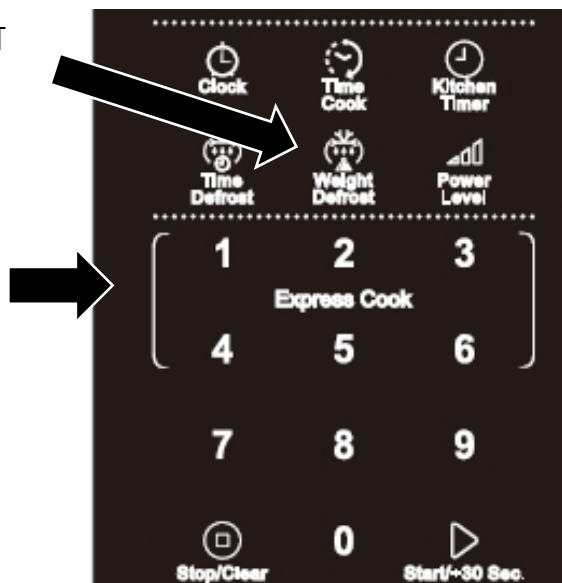

NOTE: During the defrosting process, the system will pause and beep to remind you to turn the food over. After turning the food, press the START/+30 SEC. button to resume defrosting.


Multistage Cooking

NOTE: Your oven can be programmed for up to three automatic cooking sequences.

This can include time defrosting followed by one or two microwave cooking programs, or two microwave cooking programs alone. Note that time defrost can only be set as the first stage.

Option A - Time Defrost with One or Two Microwave Cooking Programs:

1. Open the door and place the food in the oven, then close the door.
2. Press the TIME DEFROST button once.
3. Use the number buttons to set the defrosting time.
4. Enter the first microwave cooking program, but do not press the START/+30 SEC. button yet.
5. Enter the second microwave cooking program.
6. Press the START/+30 SEC. button (**Bottom Right of diagram**) to begin.

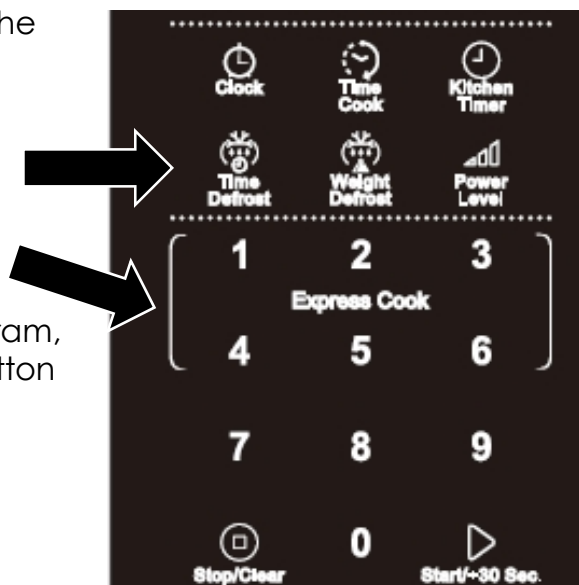


NOTE: Step 5 is not necessary if you only require one microwave cooking program.

Multistage Cooking (Continued)

Option B - Two-Stage Microwave Cooking Programs:

NOTE: Some recipes require different cooking stages at varying temperatures.

1. Enter the first microwave cooking program, but do not press the START/+30 SEC. button yet.
2. Enter the second microwave cooking program.
3. Press the START/+30 SEC. button (**Bottom Right of diagram**) to start.

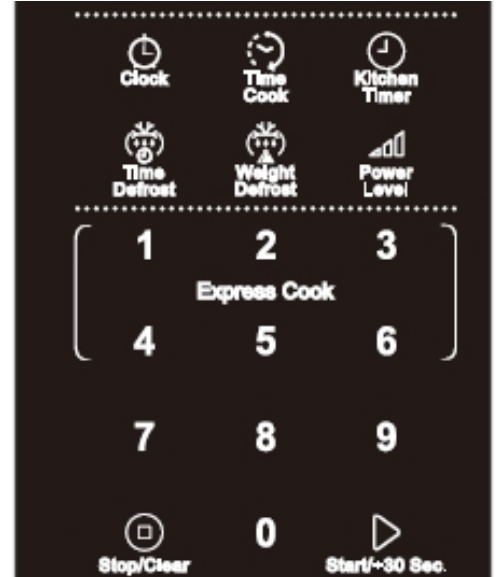


Operation

Using The Auto Cook Function

NOTE: For the following foods or cooking modes, you do not need to program the cooking power or time. Simply indicate the type of food you wish to cook along with its weight or servings.

Please refer to the below steps in conjunction with the 'Auto Cook' menu located further down this page.

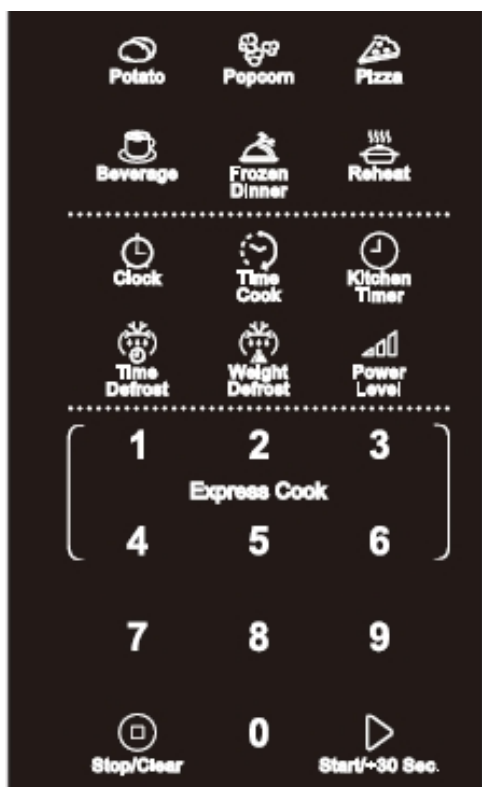

1. In standby mode, press the corresponding icon located on control panel once or repeatedly to set the food weight or servings.
2. Press the START/+30 SEC. button (**Bottom right of diagram**) to begin cooking.

| Food | Note |
|--|---|
| Potato (230±10g/serving, 1-2 servings) | The results of the auto cook feature depend on several factors, including the shape and size of the food, your personal preference for how well the food is cooked, and how the food is arranged in the oven. If you find the results are not satisfactory, please adjust the cooking time slightly to improve the outcome. |
| Popcorn (100g) | |
| Pizza (150g, 300g, 450g) | |
| Beverage (200 ml/cup, 1-3 cups) | |
| Frozen Dinner (250 g, 500g) | |
| Reheat (200-800g) | |

Child Lock Function

NOTE: The child lock feature prevents unsupervised use by children.

To activate the child lock:

In standby mode, if no operation is performed within one minute, a beep will sound, and "Loc" will appear on the display for 5 seconds.

The oven will then automatically enter child lock mode. If any button is pressed while in this mode, "Loc" will be displayed for 5 seconds as a reminder to cancel the child lock.

To deactivate the child lock:

In Child lock mode, open and close the oven door once to cancel the child lock.

Button Adhesion Protection

In any mode, if a button on the control panel is held down or stuck for 1 minute, the program will stop immediately, "FAIL" will appear on the display, and the system will beep.

If the button remains stuck, the beep will sound every minute, and all buttons will be disabled during this time. After resolving the issue, press the STOP/CLEAR button to return to standby mode.

Wave Guide Maintenance


IMPORTANT: Constant use of the microwave can cause the Wave Guide (**labelled '7' in the below diagram**) to deteriorate, like any other component, over time.

As such, it is vital you check the condition of the wave guide periodically. Damaged wave guides become ineffective and can lead to arcing.

Regular checking of the wave guide will increase the efficiency and extend the lifespan of the microwave.

For more information, and/or to order a wave guide specific to this microwave, please visit our Power Spares website: power-spares.co.uk.

Further information of Power Spares can be found on Page 40 of this manual.

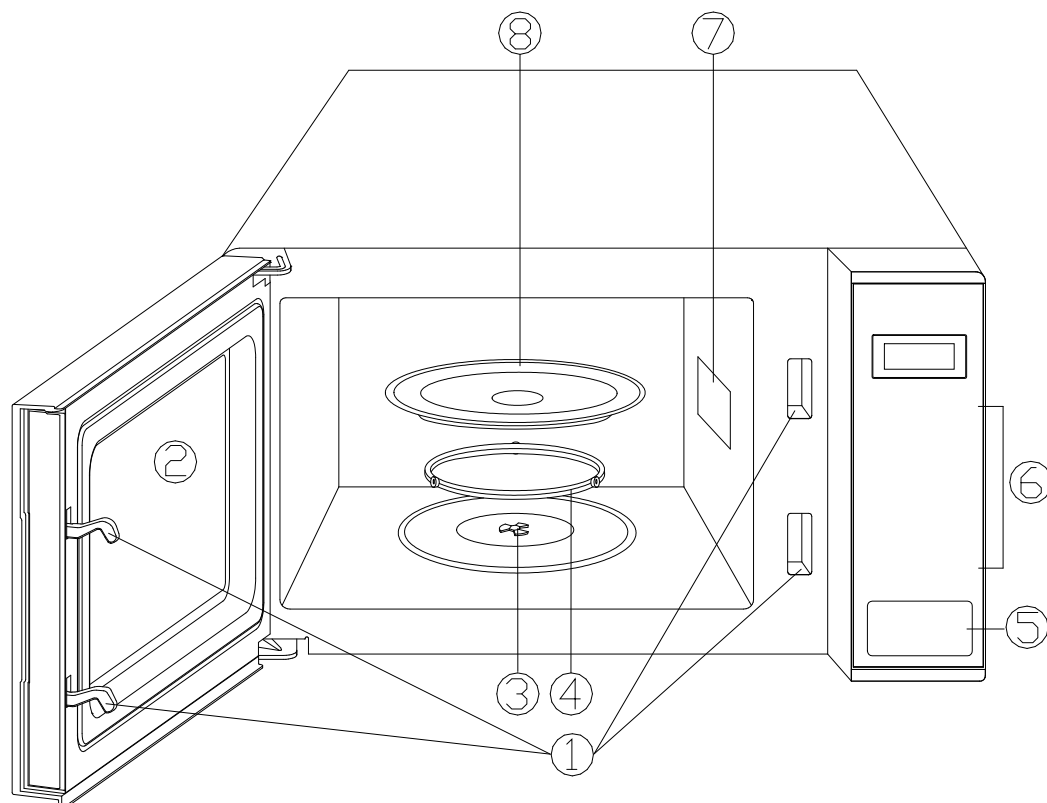

Maintenance & Care

Cleaning

- Always turn off the oven and unplug it before cleaning.
- Keep the interior of the oven clean. Wipe up food splatters and spills from the oven walls using a damp cloth. If needed, mild detergents can be used for tougher cleaning. Avoid harsh sprays or cleaners, as they can stain or damage the door surface.
- Clean the exterior of the oven with a damp cloth. Take care not to let water seep into the ventilation openings, as this could damage the internal components.
- Regularly wipe the door, window (inside and out), door seals, and surrounding areas with a damp cloth to remove any spills. Avoid using abrasive cleaners.
- Do not use a steam cleaner on the oven.
- Keep the control panel dry. Clean it with a soft, damp cloth, and ensure the oven door is open during cleaning to prevent accidental operation.
- If steam accumulates inside or around the door, wipe it off with a soft cloth. This can happen under high humidity conditions and is normal.
- Periodically remove the glass tray for cleaning. It can be washed in warm soapy water or placed in a dishwasher.
- Clean the roller ring and oven floor regularly to prevent noise during operation. Wipe the oven floor with mild detergent, and wash the roller ring in soapy water or in a dishwasher. Ensure the roller ring is properly repositioned after cleaning.
- To remove odours, microwave a bowl of water with the juice and peel of one lemon for 5 minutes. Then, wipe the interior thoroughly and dry with a soft cloth.
- If the light bulb burns out, contact customer service for a replacement.
- Regular cleaning is essential. Failure to maintain the oven in a clean condition can cause surface deterioration, reduce the appliance's lifespan, and potentially create a hazardous situation.
- Do not dispose of this appliance in regular household waste. It should be taken to a designated disposal centre provided by local authorities.

Troubleshooting

NOTE: Before requesting service, if the microwave fails to switch on or operate at its intended level, please check the following:

- Ensure the oven is securely plugged in. If not, unplug it, wait 10 seconds, and plug it back in firmly.
- Check if a circuit fuse has blown or if the main circuit breaker has tripped. If both seem to be functioning properly, test the outlet by plugging in another appliance.
- Verify that the control panel is correctly programmed and the timer is properly set.
- Ensure the oven door is securely closed and that the door lock system is engaged. If the door is not fully closed, the microwave will not operate.

If none of these steps resolves the issue, contact a qualified technician. Do not attempt to adjust or repair the oven yourself.

POWER SPARES



No Hassle Returns



Same Day Dispatch*



Over 10,000 Spare Parts



QR Code – Scan the QR code for a direct link to our website

Our Website : power-spares.co.uk

Call us : 01646 404406

Email us : sales@power-spares.co.uk

To maintain your machine in peak operating condition, proper maintenance and care are crucial. Some machines have consumable parts that will need replacement to ensure they continue operating at their full potential. Power-Spares provide manufacturer parts for all your machines, ensuring they remain in peak condition.

About Power Spares

Power-Spares has your back if you damage your lawn mower blade, find your spark plugs not sparking, or snap your recoil. Power-Spares operates under the trading name of Genpower Limited.

As part of the Genpower family, Power-Spares offers you the expertise, efficiency, and quality assurance of a large organisation. We leverage the latest warehousing, distribution, customer service, and inventory management technology to ensure you receive your parts as quickly as possible.

With extensive stock-holding of spare parts in our UK warehouses, Power-Spares is ready to assist you promptly when your machine needs repair. We're Committed to help you get back up and running as quickly as possible.

Technical Data

Specification

| | |
|------------------------------------|-------------------|
| Model | HYMW80020 |
| Output | 800W |
| Operation Frequency | 2450MHz |
| Outer Dimensions (H x W x D) | 262 x 452 x 318mm |
| Oven Cavity Dimensions (H x W x D) | 178 x 315 x 296mm |
| Oven Capacity | 20L |
| Net Weight | 11.4kg |

Recycling & Disposal

Recycling & Disposal

We do not offer a takeback scheme for the recovery of Waste Electrical Electronic Equipment (WEEE) & Batteries. Instead the responsibility to dispose of WEEE and/or Batteries is passed onto you by us.

So when it becomes necessary to dispose of your machine you must take it to your local Civic Amenity Site. For further information please contact your local Authority for disposal advice.

You **MUST** make sure that all unused oil and fuel is disposed of correctly either beforehand or at your local Civic Amenity Site.

- Certain products contain WEEE waste which should not be disposed of in your domestic waste.
- You **MUST** recycle WEEE in accordance with your local authority or recycling centre.
- Certain products contain batteries which should not be disposed of in your domestic waste.
- You **MUST** recycle batteries in accordance with your local authority or recycling centre.
- Unwanted packaging and materials should be stored and taken to a recycling centre so it can be disposed of in a manner which is compatible with the environment.

We are a Member of the VALPAK National Compliance Scheme and our registration number is RM08660. For further information about disposal please contact your Local Authority.

You can also get more advice and guidance about recycling at the following website <http://www.recycle-more.co.uk>

Should you pass this product on to another user either sold or loaned, you **MUST** pass on this user manual. This will make sure that all other users can use and maintain this machine safely.

Environmental Protection

1. Environmental protection should be a priority of considerable importance when using the machine, for the benefit of both social coexistence and the environment in which we live. Try not to cause any disturbance to the surrounding area.
2. You must comply with local regulations and provisions for the disposal of packaging, oils, fuel, filters, damaged parts or any elements which have a strong impact on the environment. This waste must not be disposed of as normal waste. It needs to be separated and taken to specified waste disposal centres where the material will be recycled.
3. You must comply with local regulations for the disposal of waste materials after mowing.
4. When disposing, do not pollute the environment with the machine, but hand it over to a disposal centre, in accordance with the local laws in force.

Declaration Of Conformity

Importer and Authorised Representative

Genpower Ltd
Isaac Way, Pembroke Dock, SA72 4RW
Country of Origin: China
Description: 800W 20L Microwave
SKU Code: HYMW80020
Date of Issue: 23/09/2025

The following declaration is issued under the sole responsibility of Genpower Ltd.

We hereby declare that the machine detailed in this declaration complies to all the relevant provisions of the following EC directives and regulations.

Regulations and Directives of Compliance

- 2014/35/EU Low Voltage Directive
- 2014/30/EU Electromagnetic Compatibility Directive
- 2009/125/EC Eco-design Requirements
- 2011/65/EU RoHS
- 1907/2006 REACH Annex XVII & SVHC as amended by EU 2022/2400
- **Regulation (EC) No 2023/2006**
- **Regulation (EC) 1935/2004**

REFERENCES TO THE RELEVANT HARMONISED SAFETY STANDARDS USED OR REFERENCES TO THE OTHER TECHNICAL SPECIFICATIONS IN RELATION TO WHICH CONFORMITY IS DECLARED:

- EN 60335-1:2012+A11+A13+A14+A2+A15
- EN IEC 60335-2-25:2021+A11
- EN 62233:2008
- EN 55011:2016+A1+A11+A2
- EN IEC 55014-2:2021
- EN IEC 61000-3-2:2019+A1
- EN 61000-3-3:2013+A1+A2

Statement of Declaration

We the importer and authorised representative of the product described confirm conformity within the provisions of applicable regulations and directives listed within this document.

Signed on Behalf of Genpower Ltd

Place of Issue: Genpower Ltd
Signatory Name: Roland Llewellyn
Position: Managing Director

R J Llewellyn

.....



Notes

Notes

Useful Information

Check Out Our YouTube Channel

Our videos on YouTube include:

- Unboxing
- Assembly of your machine
- How to service your machine
- Products in use
- 'How To' videos
- Product features

Go to YouTube and search '**Hyundai Power Products**'.

Warranty

Proof of purchase will be required before you make a warranty claim. Full warranty terms and conditions can be found on the HYUNDAI POWER PRODUCTS website:

www.hyundaipowerproducts.co.uk

Manual Updates

Our manuals are constantly being reviewed and updated. Should you find an error, omission or something unclear, please contact us for assistance. We reserve the right to make any modifications without prior notice whenever necessary.

Our latest manuals are also placed online. All our manuals can be downloaded at:

www.hyundaipowerproducts.co.uk

Returning Your Product

If you are returning your product, please contact the dealer for their returns policy.

Leaving A Review

We work very hard to give all of our customers the best possible service. If you have any problems, before leaving negative feedback, please contact us to give us a chance to resolve the issue. We would be delighted if you left us positive feedback! To leave a review, please go to:

uk.trustpilot.com/review/hyundaipowerequipment.co.uk

Ordering Spare Parts

You can find the spare part you are looking for at power-spare.co.uk

Product Record

Information

As soon as you have purchased the machine, we recommend that you fill out the following. If you need to contact an authorised dealer or customer service for information on servicing, you may need to provide the following information.

Date Of Purchase:.....

Dealer Name:.....

Dealer Phone:.....

Model Number:.....

Serial/Batch Number:.....

Contact Us

Need Help? Talk To Our Experts

Our friendly aftersales team will be more than happy to help you.



Phone

Call our team on 01646 687 880



Email

aftersales@hyundaipowerproducts.co.uk



Online Live Chat

Go to www.hyundaipowerproducts.co.uk



Post

Genpower Ltd, Isaac Way, Pembroke Dock, Pembrokeshire, SA72 4RW.



Hyundai Support Website

Go to hyundaisupport.co.uk

HYUNDAI
APPLIANCES



GENUINE PRODUCT OF
HYUNDAI CORPORATION

For Inquiries, Please Contact:

GENPOWER LTD

Isaac Way, London Road,
Pembroke Dock, UK, SA72 4RW

T: +44 (0) 1646 687 880E:

info@hyundaipowerproducts.co.uk

www.hyundaipowerproducts.co.uk